

Singer Buttonholer Attachment & Singer Monogrammer Attachment

Choose the correct plate

Left to right: #161825 for Touch & Sew and Slant-o-matic (401, 500 600 620 630 640 series)
#507661 or was replaced by #381115 for Touch & Sew with magnetic plates and Futura models)
#86748 for vertical-needle zigzag machines



Charlene
The Sew Box
www.theseinbox.com