


Singer Needle Threader

Form 21632
(1167)

INSTRUCTIONS

For Replacing Threading Hook in Built-in Needle Threader for *Touch & Sew*®* Sewing Machines by SINGER

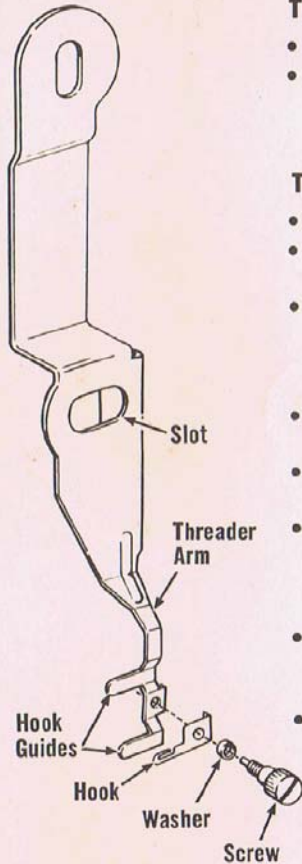

To Remove Threading Hook

- Lower the Needle Threader.
- Remove screw, washer and damaged hook from threader arm.
(See illustration.)

To Replace Threading Hook

- Make certain washer is in place on shank of screw.
- Place new hook (thread slot up) on shank of screw on top of washer.
- Replace screw with threading hook into threader arm making certain that flat at rear of hook body is flush against rear of threader arm. Then securely tighten screw.
- Lower the presser foot and raise the needle bar to its highest position.
- Position slot in threader arm over positioning screw on needle clamp.
- Check alignment of threader hook and needle eye by carefully pulling threader arm forward so that upper and lower hook guides straddle the needle. (Note: Use caution to avoid damage to new hook.)
- If the hook is not aligned properly with the needle eye, loosen the screw and guide the hook through the eye of the needle.
- Securely tighten screw and gently swing threader arm back and forward again to recheck hook setting.

THE SINGER COMPANY

Copyright © 1967 by The Singer Company

*A Trademark of THE SINGER COMPANY

Printed in U. S. A.

The Sew Box

www.thesewbox.com

All rights reserved – do not copy nor email without written consent of The Sew Box.

2008