

ATTACHMENTS FOR FAMILY SEWING MACHINES

(ORDER BY NAME AND NUMBER)

REGULAR ATTACHMENTS †† MACHINE NUMBERS

	15-30, 15-86, 15-87, 15-96, 15-97, 15-210, 15-211 and 15-212	15-88, 15-89, 15-90, 15-91	24-60 to 24-62 24-67 24-69 and 24-80	66-4, 66-5, 66-6, 66-14, 66-15, 66-16 66-18, 66-24	99	101	115	127 and 128	201 and 200	221
--	--	-------------------------------------	--	---	----	-----	-----	-------------------	-------------------	-----

NAME OF ATTACHMENT	ATTACHMENT NUMBERS										INSTRUCTION FORM NUMBER				
													English	Spanish	Portuguese
BINDER	160359	160359			160359	160359	160359	160359	160359	160359	160359				
EDGE STITCHER	36865	36865	36866		36865	36865	36865	36865	36865	36865	36865				
GATHERER	121441	121441	28863		121441	121441	121441	121441	121441	121441	121441				
HEMMER (Adjustable)	35931	35931	25503 25617 25504-W		35931	35931	35931	35931	35931	35931	35931				
HEMMER (Foot)	120842	120855			120842	120842	120842	120842	120842	120855	120855				
RUFFLER	120598	120598	26774		120598	120598	120598	120598	120598	120598	120598				

FASHION AIDS

BRAIDING PRESSER FOOT	36067	36067			36067	36067		36067	36067	36067	36067				
BLIND STITCH BRAIDER	121614	121614			121614	121614		121614	121614	121614	121614				
BUTTONHOLER	121795	121795			121795	121795	121795	121795	121795	121795	121795				
CORDER—Left Toe	15429	15429	34447		15429	15429	66777	15429	15429	15429	15429				
CORDING AND ZIPPER FOOT—(Adjustable)	121877	121877	121877		121877	121877	121877	121877	121877	121877	121877				
DARNING FOOT (Spring)	121094	121094			121094	121094	121094	121094	121094	121094	121094				
EMBROIDERER—One Thread	26538	26538			26538	26538	26538	26538	26538	26538	26538				
EMBROIDERER—Two Threads	35505	35505			35505	35505	35505	35505	35505	35505	35505				
FEED COVER PLATE	15359	15359			32589	32589	66628	15359	8335	15359	121309				
FLANGE HEMMER		36333			36333	36333		36333	36333	36333					
GAUGE—Presser Foot with Adjustable Guides	121718	121718			121718	121718	121718	121718	121718	121718	121718				
HEMSTITCHER AND PICOTER	121387	121387			121387	121387	121387	121387	121387	121387	121387				
QUILTER	35932	35932	25505		35932	35932	35932	35932	35932	35932	35932				
SHIRRING PLATE	121170	121170			121170	121170	121170	121170	35934	121170	121170				
SINGERCRAFT GUIDE	121079	121079			121079	121079	121079	121079	121079	121079	121079				
SINGERCRAFT GUIDE EXTENSION															
SINGERCRAFT FAGOTER	121255	121255			121255	121255	121255	121255	121255	121255	121255				
TUBULAR TRIMMER	35985	35985			35985	35985		35985	35985	35985	35985				
TUCKER	36583	36583	26516		36583	36583	36583	36583	36583	36583	36583				
UNDERBRAIDER	35940	35940			35963	35963	120348	35940	35937	35940	121547				
ZIGZAGGER	121706	121706			121706	121706	121706	121706	121706	121706	121706				

† Do not use with Ruffler for stitching box plaits.

‡ Indicates instructions for attachment are contained in this Form and in Instruction Form covering Machine.

† † Indicates supplied with Sewing Machine.